

Three General Types of Fit


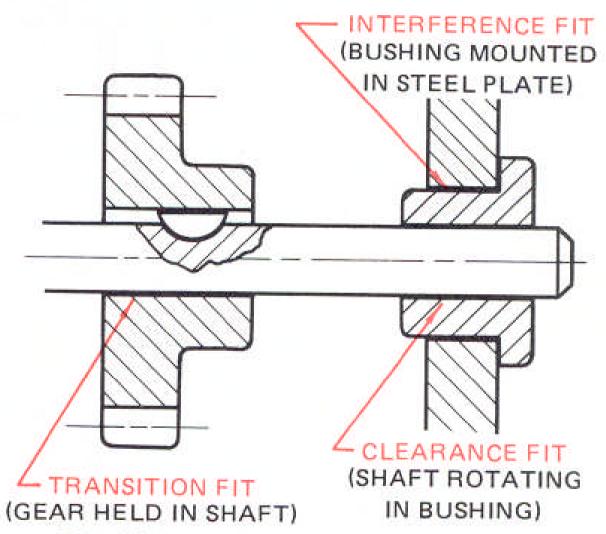


Fig. 10-3 Application of types of fits




Clearance Fit



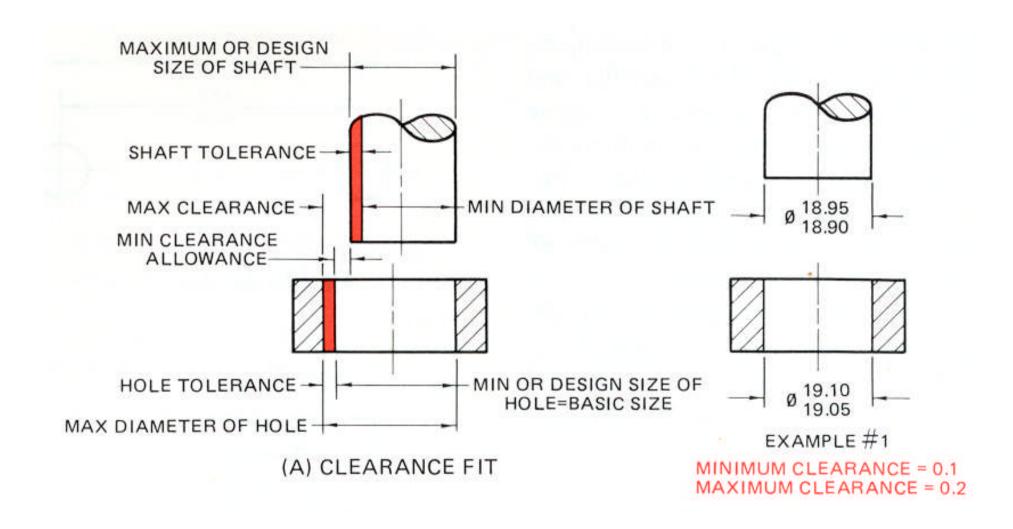


Transition Fit

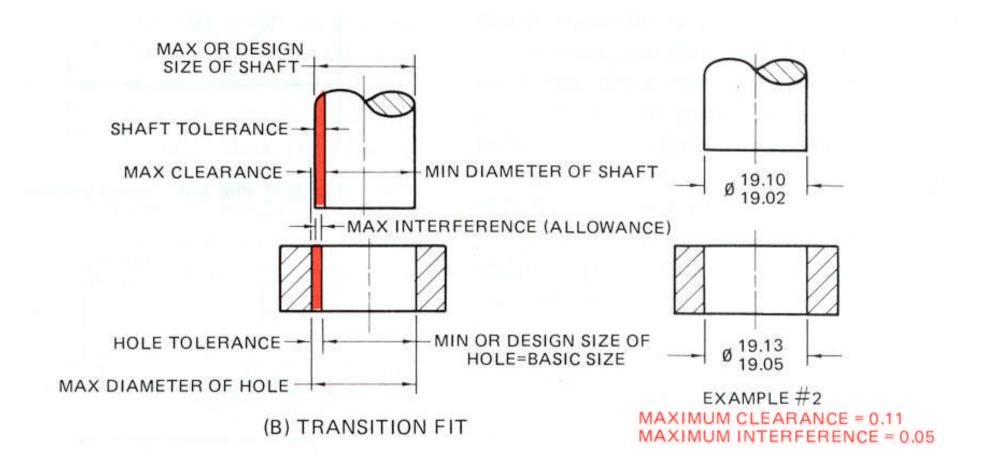




Interference Fit

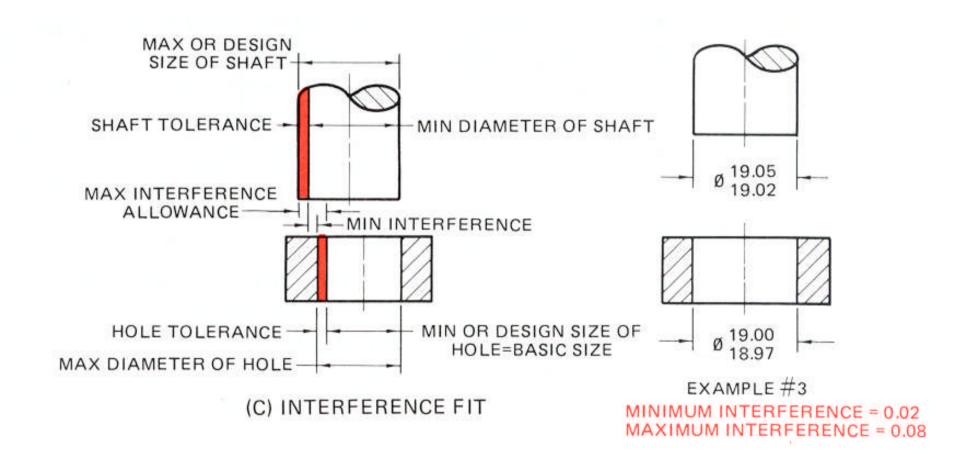





Tolerance and Fit for Holes and Shafts

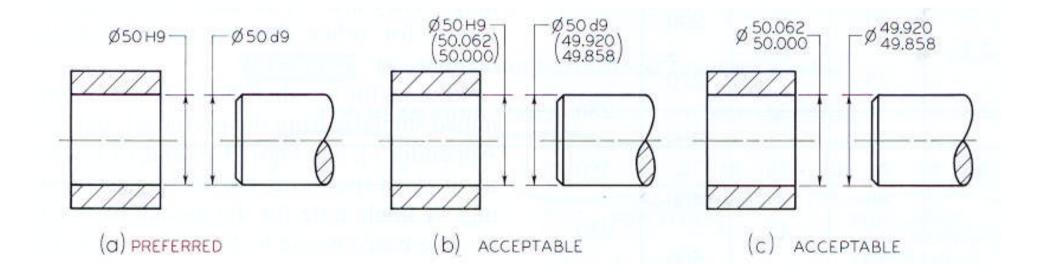




Specifying Tolerance and Fit

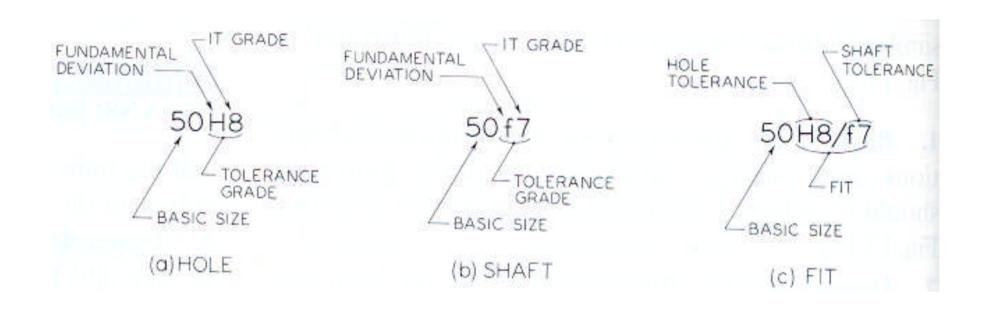

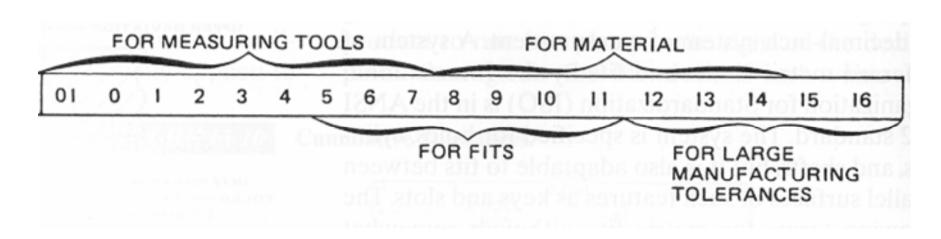



Selecting Tolerance and Fit

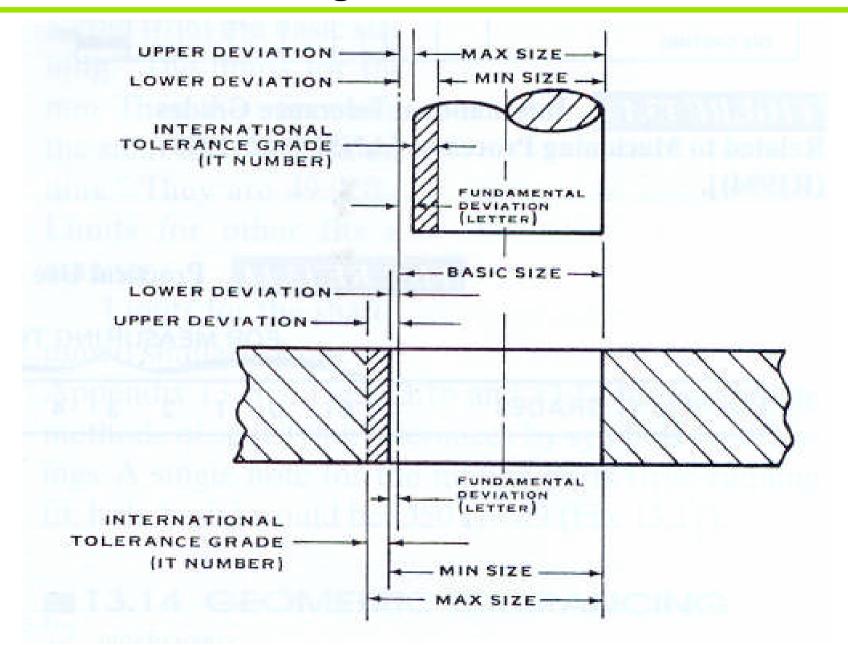



Tolerance Grade Chart

Basic sizes										Tolerance grades ^b									
Over	Up to and Including	IT01	ITO	IT1	IT2	IT3	IT4	IT5	IT6	IT7	IT8	IT9	IT10	IT11	IT12	IT13	IT14	IT15	IT16
0	3	0.0003	0.0005	0.0008	0.0012	0.002	0.003	0.004	0.006	0.010	0.014	0.025	0.040	0.060	0.100	0.140	0.250	0.400	0.600
3	6	0.0004	0.0006	0.001	0.0015	0.0025	0.004	0.005	0.008	0.012	0.018	0.030	0.048	0.075	0.120	0.180	0.300	0.480	0.750
6	10	0.0004	0.0006	0.001	0.0015	0.0025	0.004	0.006	0.009	0.015	0.022	0.036	0.058	0.090	0.150	0.220	0.360	0.580	0.900
10	18	0.0005	0.0008	0.0012	0.002	0.003	0.005	0.008	0.011	0.018	0.027	0.043	0.070	0.110	0.180	0.270	0.430	0.700	1.100
18	30	0.0006	0.001	0.0015	0.0025	0.004	0.006	0.009	0.013	0.021	0.033	0.052	0.084	0.130	0.210	0.330	0.520	0.840	1.300
30	50	0.0006	0.001	0.0015	0.0025	0.004	0.007	0.011	0.016	0.025	0.039	0.062	0.100	0.160	0.250	0.390	0.620	1.000	1.600
50	80	0.0008	0.0012	0.002	0.003	0.005	0.008	0.013	0.019	0.030	0.046	0.074	0.120	0.190	0.300	0.460	0.740	1.200	1.900
80	120	0.001	0.0015	0.0025	0.004	0.006	0.010	0.015	0.022	0.035	0.054	0.087	0.140	0.220	0.350	0.540	0.870	1.400	2.200
120	180	0.0012	0.002	0.0035	0.005	0.008	0.012	0.018	0.025	0.040	0.063	0.100	0.160	0.250	0.400	0.630	1.000	1,600	2.500
180	250	0.002	0.003	0.0045	0.007	0.010	0.014	0.020	0.029	0.046	0.072	0.115	0.185	0.290	0.460	0.720	1.150	1.850	2.900
250	315	0.0025	0.004	0.006	0.008	0.012	0.016	0.023	0.032	0.052	0.081	0.130	0.210	0.320	0.520	0.810	1.300	2.100	3.200
315	400	0.003	0.005	0.007	0.009	0.013	0.018	0.025	0.036	0.057	0.089	0.140	0.230	0.360	0.570	0.890	1.400	2.300	3.600
400	500	0.004	0.006	0.008	0.010	0.015	0.020	0.027	0.040	0.063	0.097	0.155	0.250	0.400	0.630	0.970	1.550	2.500	4.000
500	630	0.0045	0.006	0.009	0.011	0.016	0.022	0.030	0.044	0.070	0.110	0.175	0.280	0.440	0.700	1.100	1.750	2.800	4.400
630	800	0.005	0.007	0.010	0.013	0.018	0.025	0.035	0.050	0.080	0.125	0.200	0.320	0.500	0.800	1.250	2.000	3.200	5.000
800	1000	0.0055	0.008	0.011	0.015	0.021	0.029	0.040	0.056	0.090	0.140	0.230	0.360	0.560	0.900	1.400	2.300	3.600	5.600
1000	1250	0.0065	0.009	0.013	0.018	0.024	0.034	0.046	0.066	0.105	0.165	0.260	0.420	0.660	1.050	1.650	2.600	4.200	6.600
1250	1600	0.008	0.011	0.015	0.021	0.029	0.040	0.054	0.078	0.125	0.195	0.310	0.500	0.780	1.250	1.950	3.100	5.000	7.800
1600	2000	0.009	0.013	0.018	0.025	0.035	0.048	0.065	0.092	0.150	0.230	0.370	0.600	0.920	1.500	2.300	3.700	6.000	9.200
2000	2500	0.011	0.015	0.022	0.030	0.041	0.057	0.077	0.110	0.175	0.280	0.440	0.700	1.100	1.750	2.800	4.400	7.000	11.000
2500	3150	0.013	0.018	0.026	0.036	0.050	0.069	0.093	0.135	0.210	0.330	0.540	0.860	1.350	2.100	3.300	5.400	8.600	13.500

^a From ANSI B4.2-1978 (R1994).

^b IT Values for tolerance grades larger than IT16 can be calculated by using the formulas: IT17 = IT \times 10, IT18 = IT13 \times 10, etc.



Preferred Fit and Range of Fit

	ISO Sy	mbol		
	Hole Basis	Shaft ^a Basis	Description	
its	H11/c11	C11/h11	Loose-running fit for wide commercial tolerances or allowances on external members.	1
n Fits Clearance Fits	H9/d9	D9/h9	Free-running fit not for use where accuracy is essential, but good for large temperature variations, high running speeds, or heavy journal pressures.	6)
	H8/f7	F8/h7	Close-running fit for running on accurate machines and for accurate location at moderate speeds and journal pressures.	arance
	H7/g6	G7/h6	Sliding fit not intended to run freely, but to move and turn freely and locate accurately.	More clearance
	H7/h6	H7/h6	Locational clearance fit provides snug fit for locating stationary parts; but can be freely assembled and disassembled.	Mc
Transition Fits	H7/k6	K7/h6	Locational transition fit for accurate location, a compromise between clearance and interference.	9
Interference Fits Tra	H7/n6	N7/h6	Locational transition fit for more accurate location where greater interference is permissible.	ferenc
	H7/p6	P7/h6	Locational interference fit for parts requiring rigidity and alignment with prime accuracy of location but without special bore pressure requirements.	More interference
	H7/s6	S7/h6	Medium drive fit for ordinary steel parts or shrink fits on light sections, the tightest fit usable with cast iron.	2
	H7/u6	U7/h6	Force fit suitable for parts which can be highly stressed or for shrink fits where the heavy pressing forces required are impractical.	



Preferred Clearance Fit Tolerances

		Lo	ose Runi	ning	Free Running			Close Running			Sliding			Locational Clearance		
Basic Size	Basic Size		Shaft c11	Fit	Hole H9	Shaft d9	Fit	Hole H8	f 7	Fit	Hole H7	Shaft g6	Fit	Hole H7	Shaft h6	Fit
1	Max Min	1.060 1.060	0.940 0.880	0.180 0.060	1.025 1.000	0.980 0.955	0.070 0.020	1.014 1.000	0.994 0.984	0.030 0.006	1.010 1.000	0.998 0.992	0.018 0.002	1.010 1.000	1.000 0.994	0.016 0.000
1.2	Max Min	1.260 1.200	1.140 1.080	0.180 0.060	1.225 1.200	1.180 1.155	0.070 0.020	1.214 1.200	1.194 1.184	0.030 0.036	1.210 1.200	1.198 1.192	0.018 0.002	1.210 1.200	1.200 1.194	0.016 0.000
1.6	Max Min	1.660 1.600	1.540 1.480	0.180 0.060	1.625 1.600	1.580 1.555	0.070 0.020	1.614 1.600	1.594 1.584	0.030 0.006	1.610 1.600	1.598 1.592	0.018 0.002	1.610 1.600	1.600 1.594	0.016 0.000
2	Max Min	2.060 2.000	1.940 1.880	0.180 0.060	2.025 2.000	1.980 1.955	0.070 0.020	2.014 2.000	1.994 1.984	0.030 0.006	2.010 2.000	1.998 1.992	0.018 0.002	2.010 2.000	2.000 1.994	0.016 0.000
2.5	Max Min	2.560 2.500	2.440 2.380	0.180 0.060	2.525 2.500	2.480 2.455	0.070 0.020	2.514 2.500	2.494 2.484	0.030 0.006	2.510 2.500	2.498 2.492	0.018 0.002	2.510 2.500	2.500 2.494	0.016 0.000
3	Max Min	3.060 3.000	2.940 2.880	0.180 0.060	3.025 3.000	2.980 2.955	0.070 0.020	3.014 3.000	2.994 2.984	0.030	3.010 3.000	2.998 2.992	0.018 0.002	3.010 3.000	3.000 2.994	0.016 0.000
4	Max Min	4.075 4.000	3.930 3.855	0.220 0.070	4.030 4.000	3.970 3.940	0.090 0.030	4.018 4.000	3.990 3.978	0.040 0.010	4.012 4.000	3.996 3.988	0.024 0.004	4.012 4.000	4.000 3.992	0.020
5	Max Min	5.075 5.000	4.930 4.855	0.220 0.070	5.030 5.000	4.970 4.940	0.090 0.030	5.018 5.000	4.990 4.978	0.040 0.010	5.012 5.000	4.996 4.988	0.024 0.004	5.012 5.000	5.000 4.992	0.020
6	Max Min	6.075 6.000	5.930 5.855	0.220 0.070	6.030 6.000	5.970 5.940	0.090 0.030	6.018 6.000	5.990 5.978	0.040 0.010	6.012 6.000	5.996 5.988	0.024 0.004	6.012	6.000 5.992	0.020 0.000
8	Max Min	8.090 8.000	7.920 7.830	0.260 0.080	8.036 8.000	7.960 7.924	0.112 0.040	8.022 8.000	7.987 7.972	0.050 0.013	8.015 8.000	7.995 7.986	0.029 0.005	8.015 8.000	8.000 7.991	0.024
10	Max Min	10.090 10.000	9.920 9.830	0.260 0.080	10.036 10.000	9.960 9.924	0.112 0.040	10.022 10.000	9.987 9.972	0.050 0.013	10.015 10.000	9.995 9.986	0.029 0.005	10.015 10.000	10.000 9.991	0.024
12	Max Min	12.110 12.000	11.905 11.795	0.315 0.095	12.043 12.000	11.950 11.907	0.136 0.050	12.027 12.000	11.984 11.966	0.061 0.016	12.018 12.000	11.994 11.983	0.035 0.006	12.018	12.000 11.989	0.029
16	Max Min	16.110 16.000	15.905 15.795	0.315 0.095	16.043 16.000	15.950 15.907	0.136 0.050	16.027 16.000	15.984 15.966	0.061 0.016	16.018 16.000	15.994 15.983	0.035 0.006	16.018 16.000	16.000 15.989	0.029
20	Max Min	20.130 20.000	19.890 19.760	0.370 0.110	20.052 20.000	19.935 19.883	0.169 0.065	20.033 20.000	19.980 19.959	0.074 0.020	20.021 20.000	19.993 19.980	0.041 0.007	20.021 20.000	20.000 19.987	0.034 0.000
25	Max Min	25.130 25.000	24.890 24.760	0.370 0.110	25.052 25.000	24.935 24.883	0.169 0.065	25.033 25.000	24.980 24.959	0.074 0.020	25.021 25.000	24.993 24.980	0.041 0.007	25.021 25.000	25.000 24.987	0.034 0.000
30	Max Min	30.130 30.000	29.890 29.760	0.370 0.110	30.052 30.000	29.935 29.883	0.169 0.065	30.033 30.000	29.980 29.959	0.074 0.020	30.021 30.000	29.993 29.980	0.041 0.007	30.021 30.000	30.000 29.987	0.034 0.000